

VERVE HOME PHONE BASE

Quick Start Guide



Consumer Cellular®

WHAT'S IN THE BOX

 
When you open the package, the box contains the following items:

- Verve Home Phone Base
- Charger
- USB-C cable
- Battery
- Antenna(2)
- Quick start guide

Verve Home Phone Base	Charger	USB-C cable
		
Battery	Antenna	QSG
		

GET TO KNOW YOUR DEVICE

Top View

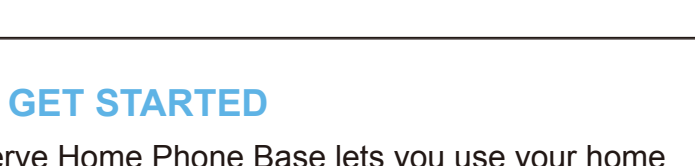

Back View

 
 


LET'S GET STARTED

Your Verve Home Phone Base lets you use your home phone anywhere.

1.INSTALL THE BATTERY


a. With the bottom facing up, sandwich the Verve Home Phone Base between your hands. Slide your top hand down to remove the back cover.

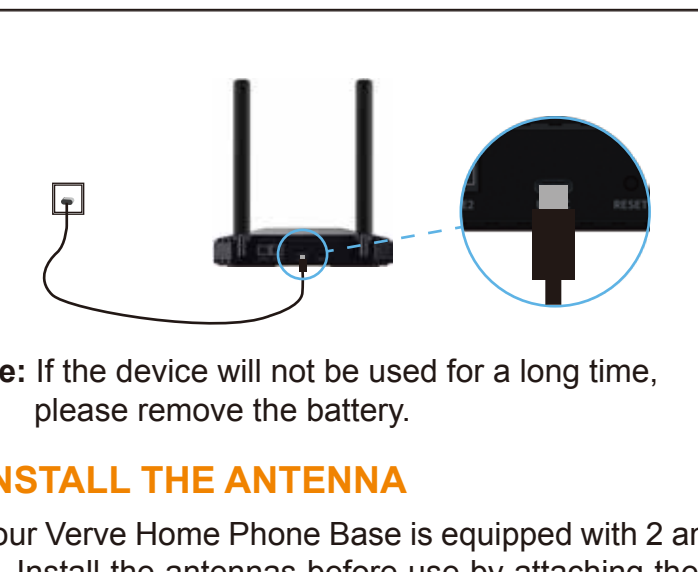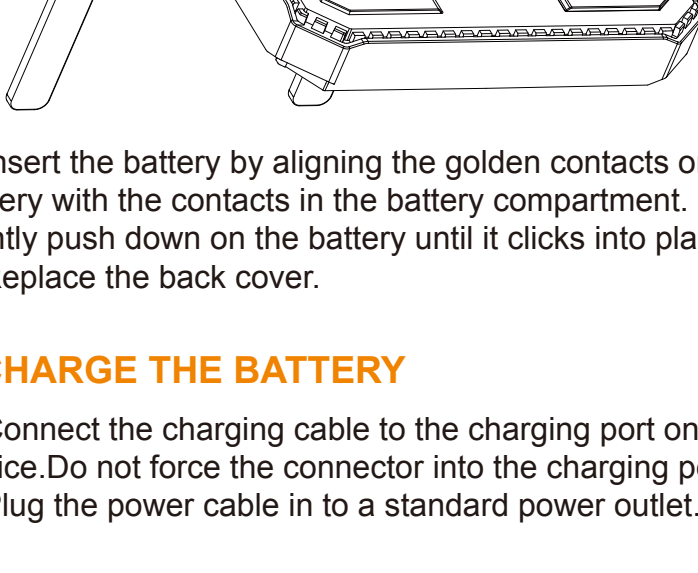

- b. Insert the battery by aligning the golden contacts on the battery with the contacts in the battery compartment. Gently push down on the battery until it clicks into place.
- c. Replace the back cover.

2.CHARGE THE BATTERY

 - a. Connect the charging cable to the charging port on the device.Do not force the connector into the charging port.
- b. Plug the power cable in to a standard power outlet.

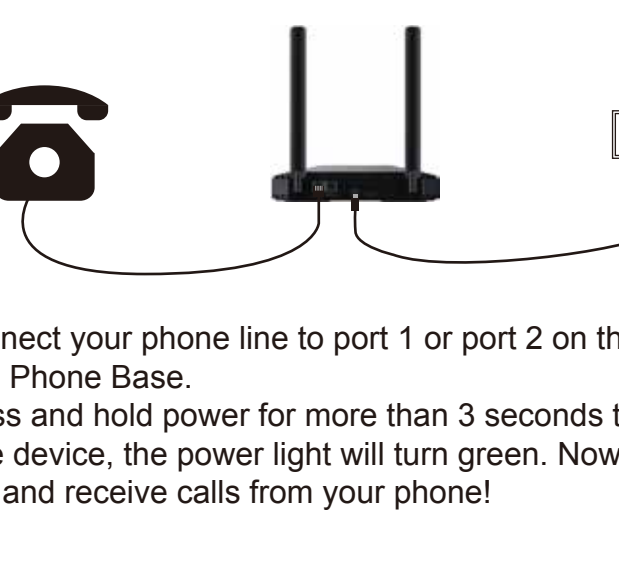


Note: If the device will not be used for a long time, please remove the battery.

3.INSTALL THE ANTENNA

- a. Your Verve Home Phone Base is equipped with 2 antennas. Install the antennas before use by attaching them to the gold ports on the back of the device and turning clockwise until tight.
- b. Fold the antenna so that it stands vertically when the device is placed on a surface.

4.CONNECT A PHONE

 - a. Your device works with your wireless service provider's cellular network. Place your device in an area where there is a strong signal, typically near a window or wall.

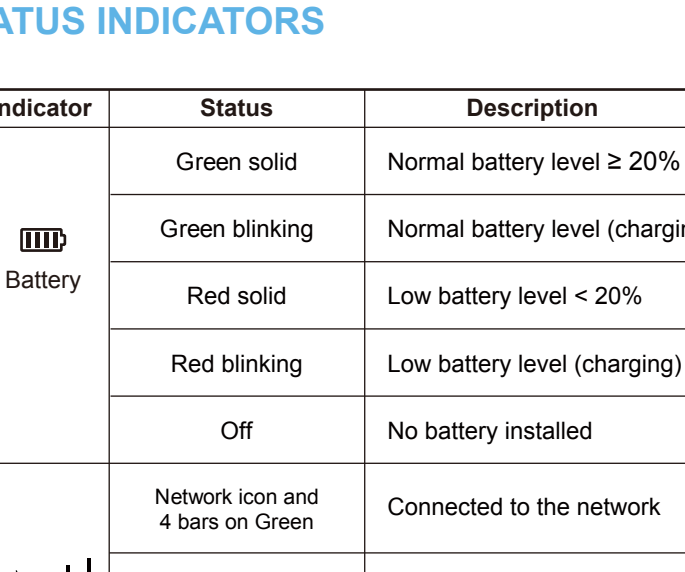

b. Connect your phone line to port 1 or port 2 on the Verve Home Phone Base.

c. Press and hold power for more than 3 seconds to power on the device, the power light will turn green. Now you can make and receive calls from your phone!

STATUS INDICATORS

Indicator	Status	Description
 Power	Green solid	Powered on
	Green blinking	Shutting down
	Off	Powered off
 Voicemail	Green blinking	New voicemail message
	Off	No new voicemail message

 Information	Green solid	Software update in process
	Green blinking rapidly 1s interval	Ready to update
	Green blinking slowly 3s interval	Software update successful
	Red blinking 2s	Software update failed

STATUS INDICATORS

Indicator	Status	Description
 Battery	Green solid	Normal battery level $\geq 20\%$
	Green blinking	Normal battery level (charging)
	Red solid	Low battery level $< 20\%$
	Red blinking	Low battery level (charging)
	Off	No battery installed
 Wireless service	Network icon and 4 bars on Green	Connected to the network
	Network icon on Red and bars off	Need PUK/PIN code or other account issue
	Network icon red blinking and bars off	Limited or no service, Searching for service, IMS registration failed,etc.

SAFETY PRECAUTIONS

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Only authorized service providers shall replace battery.
(If the battery is non-user replaceable).

- Promptly dispose of used batteries in accordance with local regulations.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.

- Improper battery use may result in a fire, explosion or other hazard.

FCC COMPLIANCE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Federal Communication Commission (FCC) Radiation Exposure Statement.
When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.